 
物料名称 物料号 SKU编码 商品名称 产品型号 图号 商品ID 69码 无线吸尘器 1400146032 RM46海外新西兰说明书(英语) 1C464EUR XCQ08RM RM-1946-432 12103 6970019141916

活力红 无线吸尘器S1 Special 新西兰 XCQ08RM 6970019141916 1C464EUR







When using an electrical appliance, basic precautions should always be followed, including the following: Warning: in order to avoid causing harm to you and others and causing unnecessary property damage, read carefully and observe the following "safety precautions" before use. The safety precautions are divided into two parts: "Warning" and "Attention". Both "Warning" and "Attention" are important parts of

Warning Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury. Attention Notices that can lead to slight injury or product safety risk

1. Do not use this product near wet places such as the bathroom; 2. Do not use on cleaning liquids, matches and damp rubbish; 3. Do not use broken power plug and loose socket; 4. Do not disassemble, repair or transform by yourself to avoid fire, injury or improper operation, except certified replacement of consumables according to this manual;

5. Use AC power at rated voltage, do not use generator or DC power supply, etc., to avoid causing fire and 6. Regularly use dry cleaning cloth to clean the dust on the plug, so as to avoid fire due to poor insulation 7. Make sure that the plug is well inserted in the bottom to avoid electric shock, short circuit and fire; 8. In case of any abnormal failure, stop using it immediately to avoid causing smoke, fire and electric shock; ③ Intermittent power supply, when moving plug or power cord; ④ Body distortion, unusual heating; ⑤ Smell of burning; (6) If there is any abnormal sound during operation, immediately cut off the power supply and unplug the plug, and the manufacturer or its maintenance staff shall replace and repair it to avoid any danger; 10. Be sure to remove the plug from the power socket before cleaning and maintenance to avoid electric  $the \ electric \ brush \ is \ wrapped \ around \ the \ hair \ or \ other \ excessively \ long \ fibers, \ and \ clean \ it \ in \ time;$ 12. Do not pour water on the body of the machine and plug or immerse the body and/or plug into water 13. Do not operate the vacuum facing the ears, eyes, mouth and other body parts; 14. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved; 15. Keep the vacuum cleaner away from the hospital's electromagnetic equipment; 16. For indoor use only, do not expose to rain; 17. If the cord is damaged, it must be replaced by the manufacturer, our service agent or other qualified persons,

18. The charger must not be used if the enclosure is damaged because this will cause hazard of electric shock; 19. The power adapter is only used for the indicated vacuum cleaner; 20. Before charging, check whether the voltage specified on the marking label corresponds to the mains 21. Keep the charger away from all sources of heat; 22. Do not immerse the appliance in water; 23. Do not continue to use the appliance in such cases: drop, impact by a heavy object, other means of damage, etc. If it occurs, get the charger, repaired by our service agent; 25. Remove the plug from the socket before cleaning or maintaining the charger;

26. Do not try to charge non-rechargeable batteries with this charger;


 Marning 27. When the vacuum cleaner is attached to the magnetic wall mount, do not let children or pets collide with it to avoid damage; 28. Household use only; 29. To reduce the risk of fire, electric shock, or injury; 30. Do not leave appliance when plugged in. Unplug from outlet when not in use and before servicing; 31. Do not allow to be used as a toy, Close attention is necessary when used by or near children; 32. Use only as described in this manual. Use only manufacturer's recommended attachments;

33. Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged left outdoors, or dropped into water, return it to a service center; 34. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges of 35. Do not run appliance over cord, Keep cord away from heated surfaces; 36. Do not unplug by pulling on cord, To unplug, grasp the plug, not the cord; 37. Do not handle plug or appliance with wet hands; 38. Do not put any object into openings, Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow; 39. Turn off all controls before unplugging; 40. Use extra care when cleaning on stairs; 41. Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be 42. Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack,  $picking \, up \, or \, carrying \, the \, appliance. \, Carrying \, the \, appliance \, with \, your \, finger \, on \, the \, switch \, or \, energizing \, appliance \, carrying \, the \, appliance \, carrying \, carryin$ that have the switch on invites accidents; 43. Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack; risk of injury and fire; 45. When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire; 46. When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys,


47. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns; 48. Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury; 49. Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature 50. Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire; 51. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained; 52. Do not modify or attempt to repair the appliance or the battery pack except as indicated in the instructions for use and care; 53. Children shall not play with the appliance; 54. Cleaning and user maintenance shall not be made by children without supervision;


nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting


the Shorting the battery terminals together may cause burns or a fire;

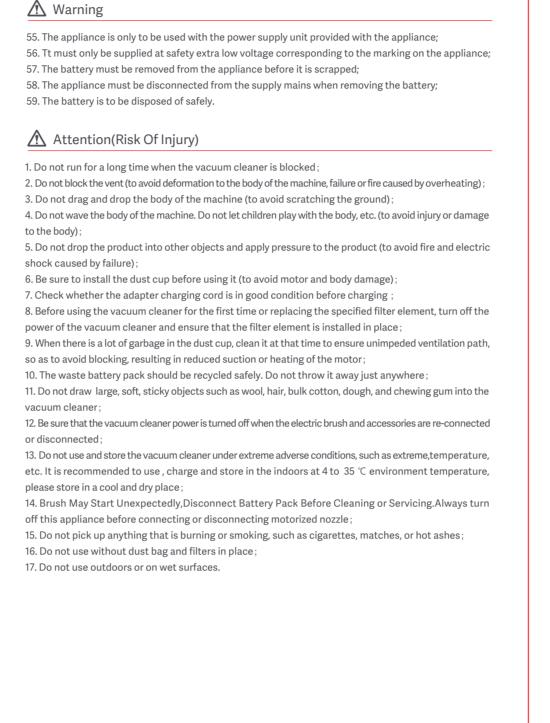



SAVE THESE INSTRUCTIONS

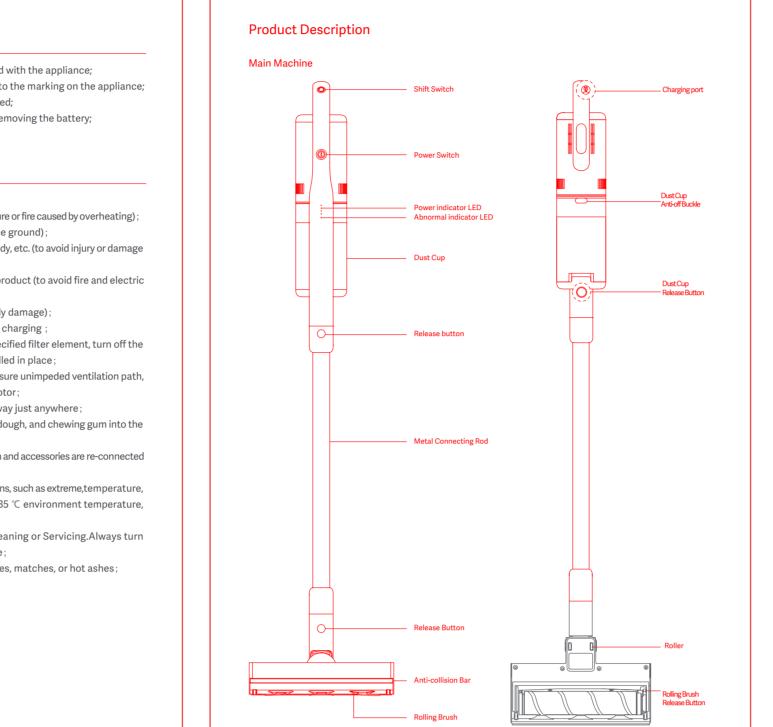

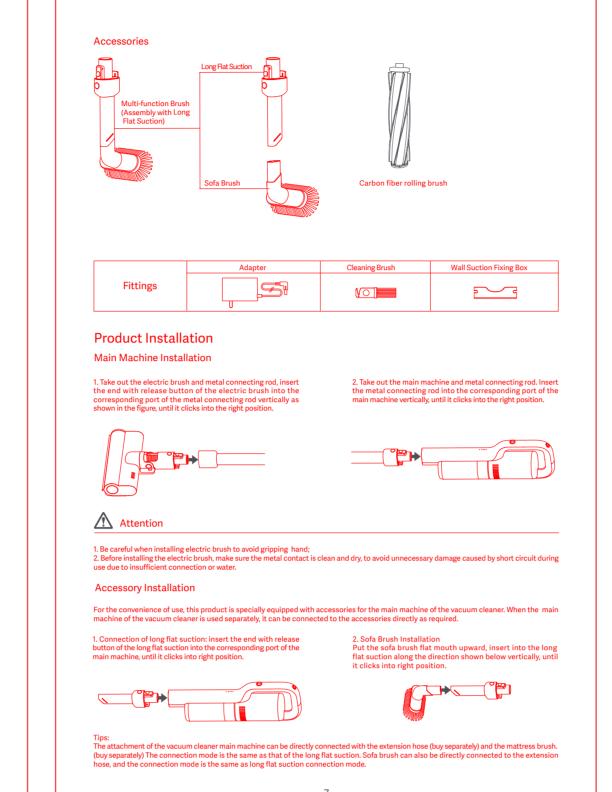


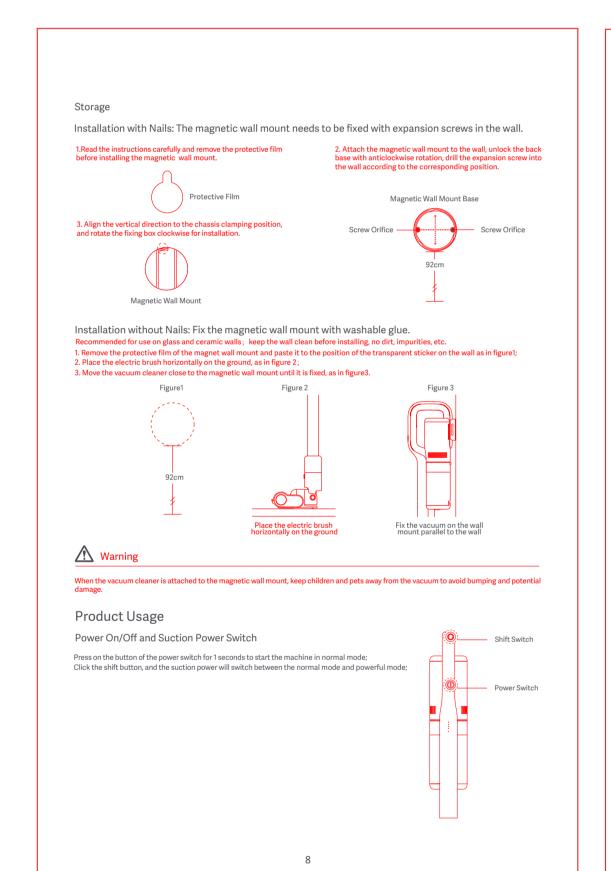

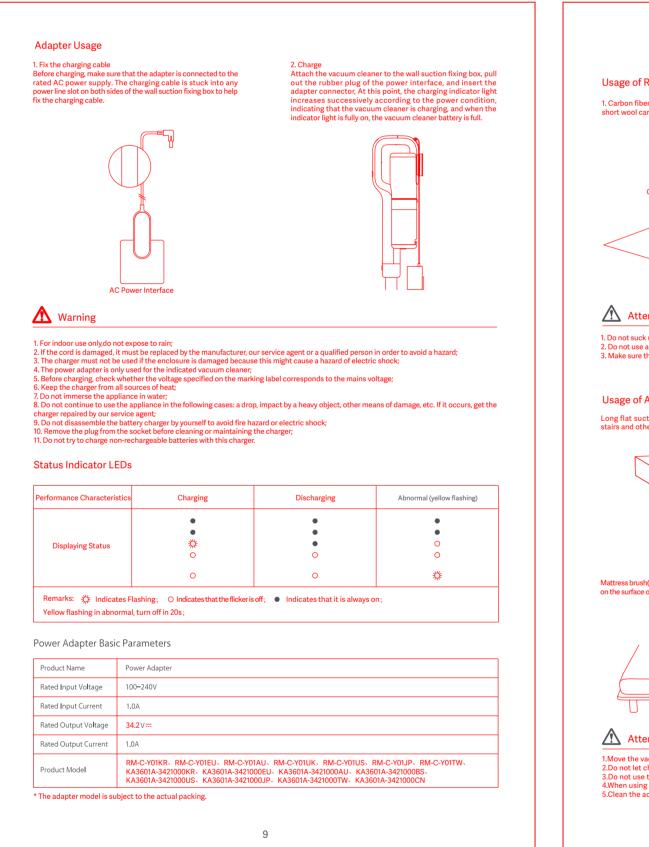


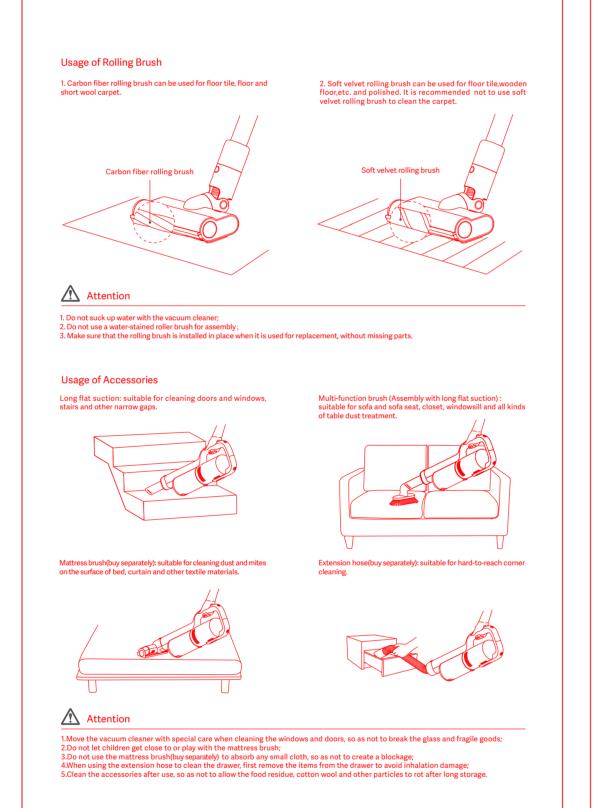



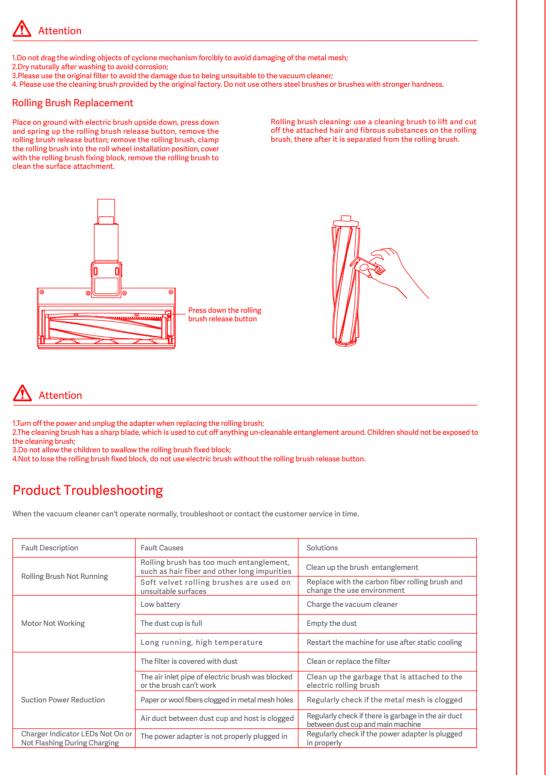



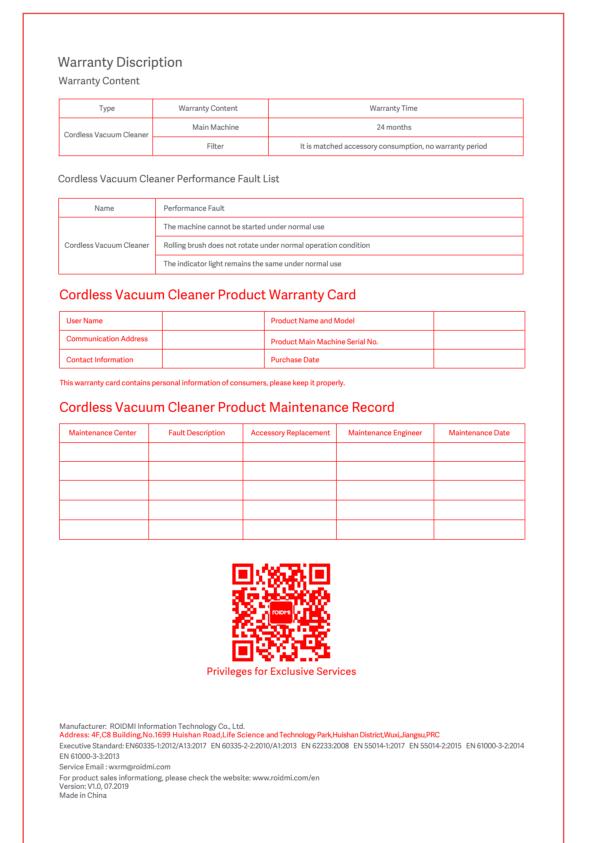



提供单位 大锡睿米信息技术有限公司

项目名称 R46无线吸尘器

版本号 V0.2

设计时间 2019.07.09

设计于 魏婷婷

设计审核 张志强

## 样品

样品数量 ▶ 10套

出血线	
切刀	
エムド	
<b></b>	
止力	
齿刀	
TT ±曲	
开槽	
半穿	
十分	
业上人	
$\Lambda$ $\square$	

比例 1:1 单位 mm 未注尺寸请参考图面尺寸或3D尺寸

印刷颜色 ▶ PANTONE Cool Gray 11C+CMYK	成品尺寸 ▶ 143*225mm	制作工序 ▶ 印刷+过哑油+裁切+装订	必须符合欧盟相关规范及睿米质量管理要求,如ROHS 2.0 检测标准 ▶ REACH、PAHs、POPs、CP65、WEEE、美国、欧洲 国内的包装指令等要求
物料材质 ▶ 105g哑粉纸	特种工艺▶过哑油	纹理要求▶	色相正确、印迹牢固、套印准确、各色套印工艺要求 ▶ 模切走位≤±0.5mm 不露杂色,套印误差≤ 0.1mm
历史版本 ▶ ∨0.1			
修 改点▶添加适配器型号			
修 改人▶ 魏婷婷/20190709			